

FOR HOLE SET "A"
USE: M12X140 BOLTS
M12X30X3 WASHERS
M12 NYLOCK NUTS

HOLE SET "A"
passenger side



"A"

"B"

"C"

"B"

"C"


"A"

HOLE SET "B"
passenger side



HOLE SET "C"
passenger side

FOR HOLE SET "B" & "C"
USE: M10X30X1.25 SET SCREWS
M10X30X3 WASHERS
M10 SPRINGWASHERS

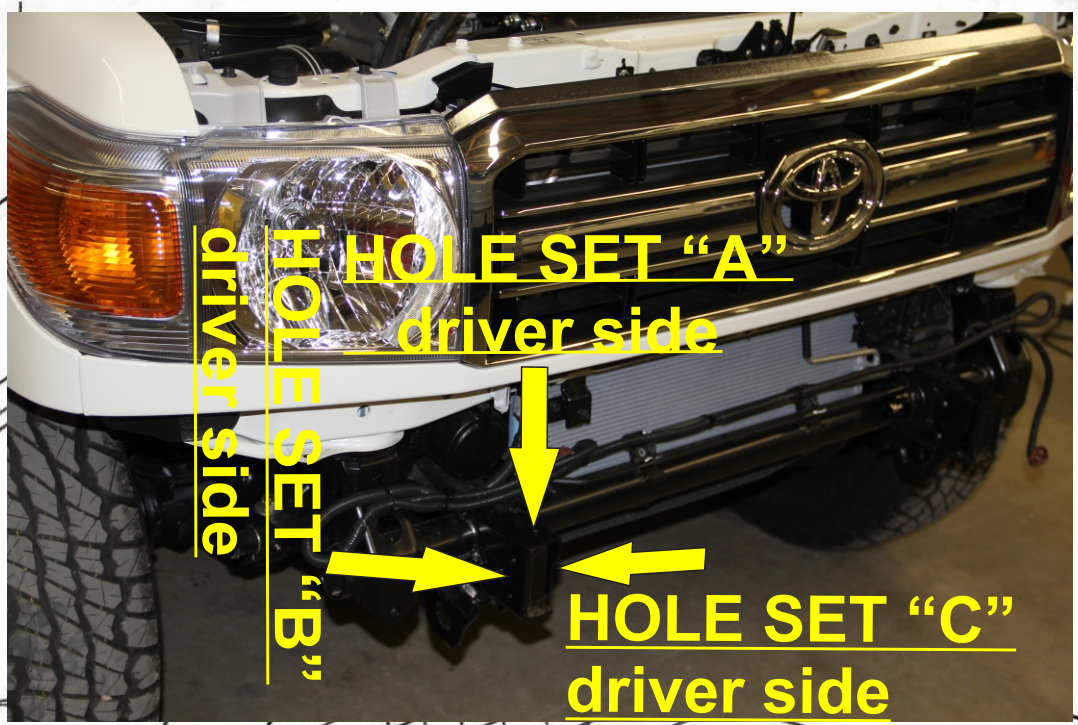

HOLE SET "B"
driver side

HOLE SET "A"
driver side

HOLE SET "C"
driver side

REMOVE FACTORY PLASTIC BUMPER
AND SLIDE ONCA BULL BAR OVER
VEHICLE CHASSIS AND BOLT DOWN.

MAKE SURE THERE IS A 10mm-15mm GAP
BETWEEN BULL BAR AND BODY WORK
AND THAT THE BULL BAR IS FITTED LEVEL
ALL WAY ROUND

